

OP Top Monitor Mount

Manual




Take out
2* horizontal support
1* display backplate
4* M6x40 bolt
4* 3030 M6 slotted bolt
4* M6 washer

Attach the display backplate as shown.
Use M6 slotted nuts as counterparts to bolts that are installed "backwards".
So remember; the flat side of the slotted nut per bolt.




After that, take out
2* hpl outer vertical support
4* M6x30 bolt
4* 3030 M6 slotted nut

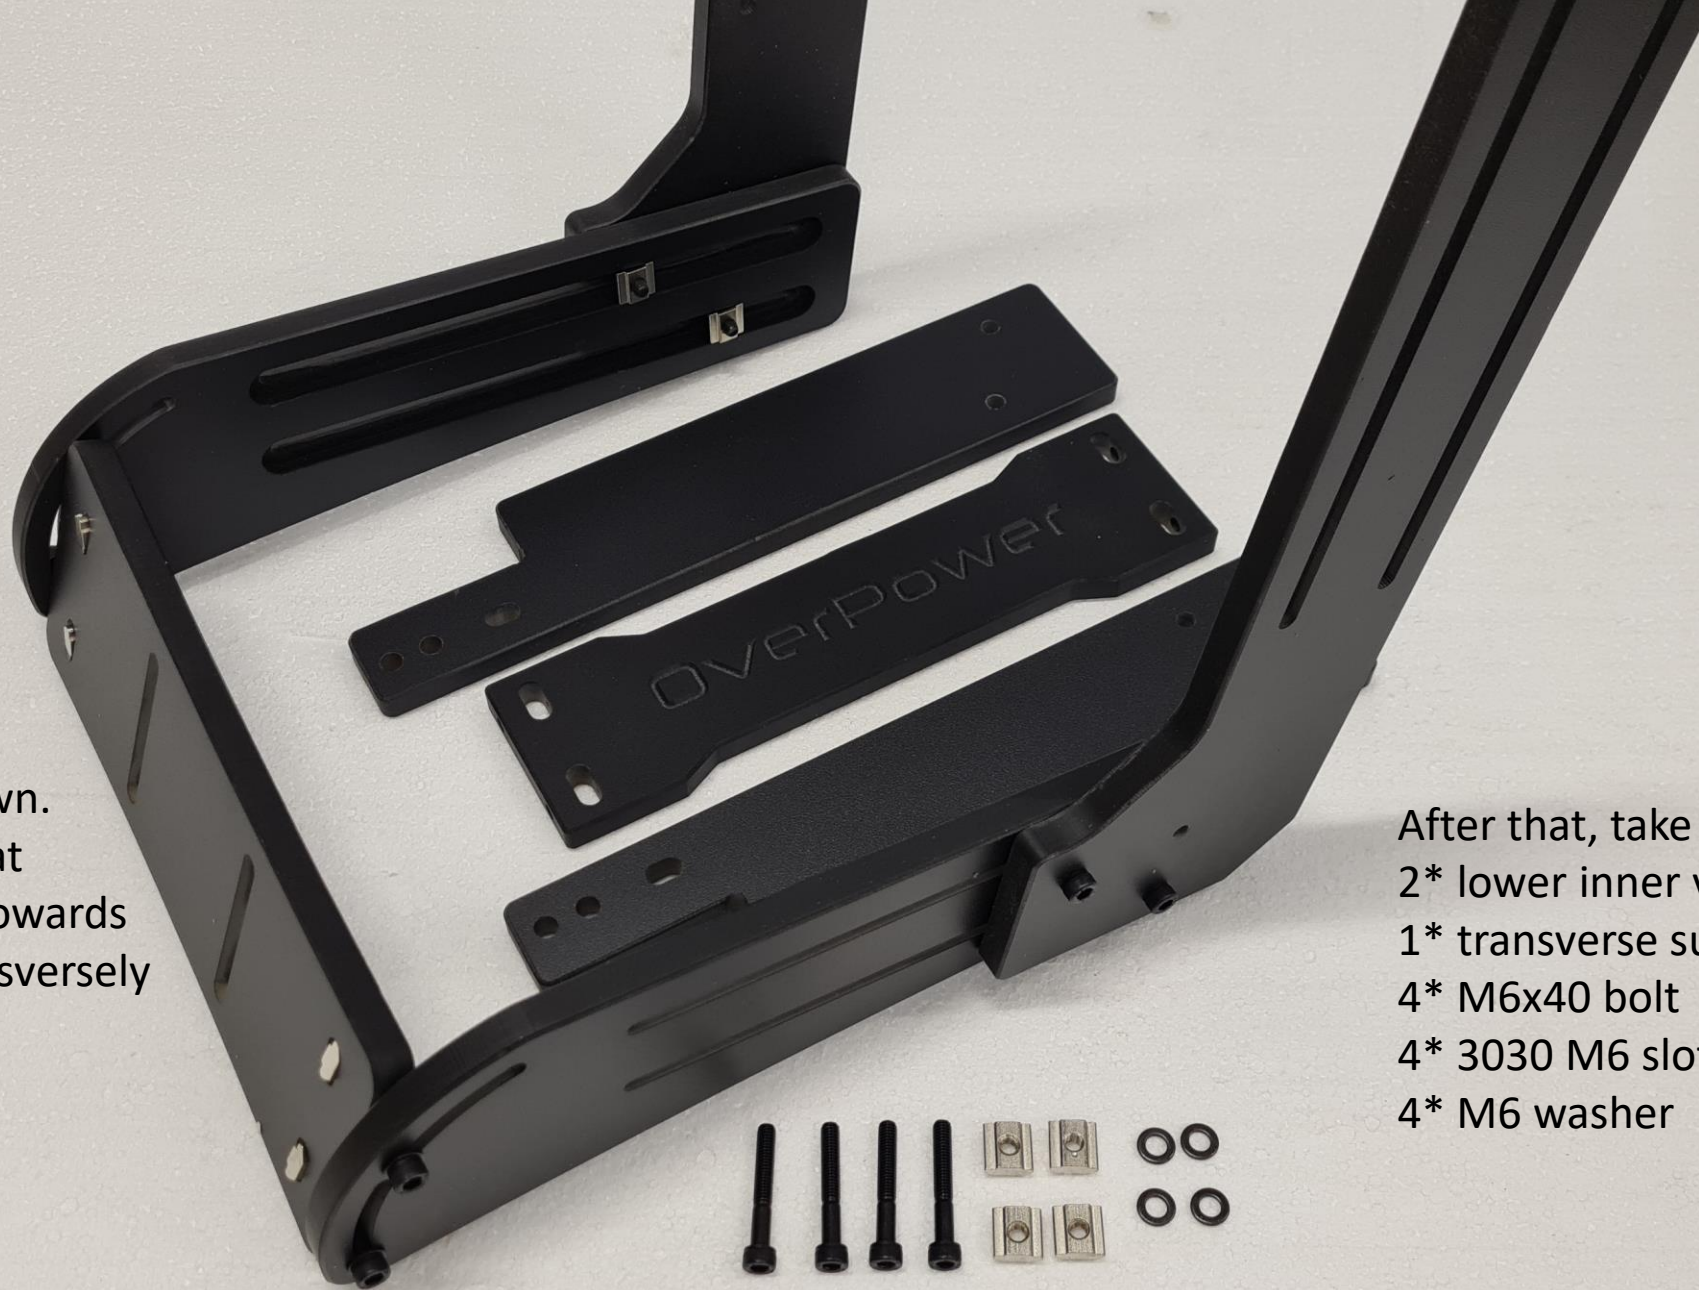


Attach the parts as shown.
Use a slotted nut, so that
the flat surface points towards
the bolt and turn it transversely
as shown.

After that, take out
2* lower inner vertical support
1* transverse support
4* M6x40 bolt
4* 3030 M6 slotted nut
4* M6 washer

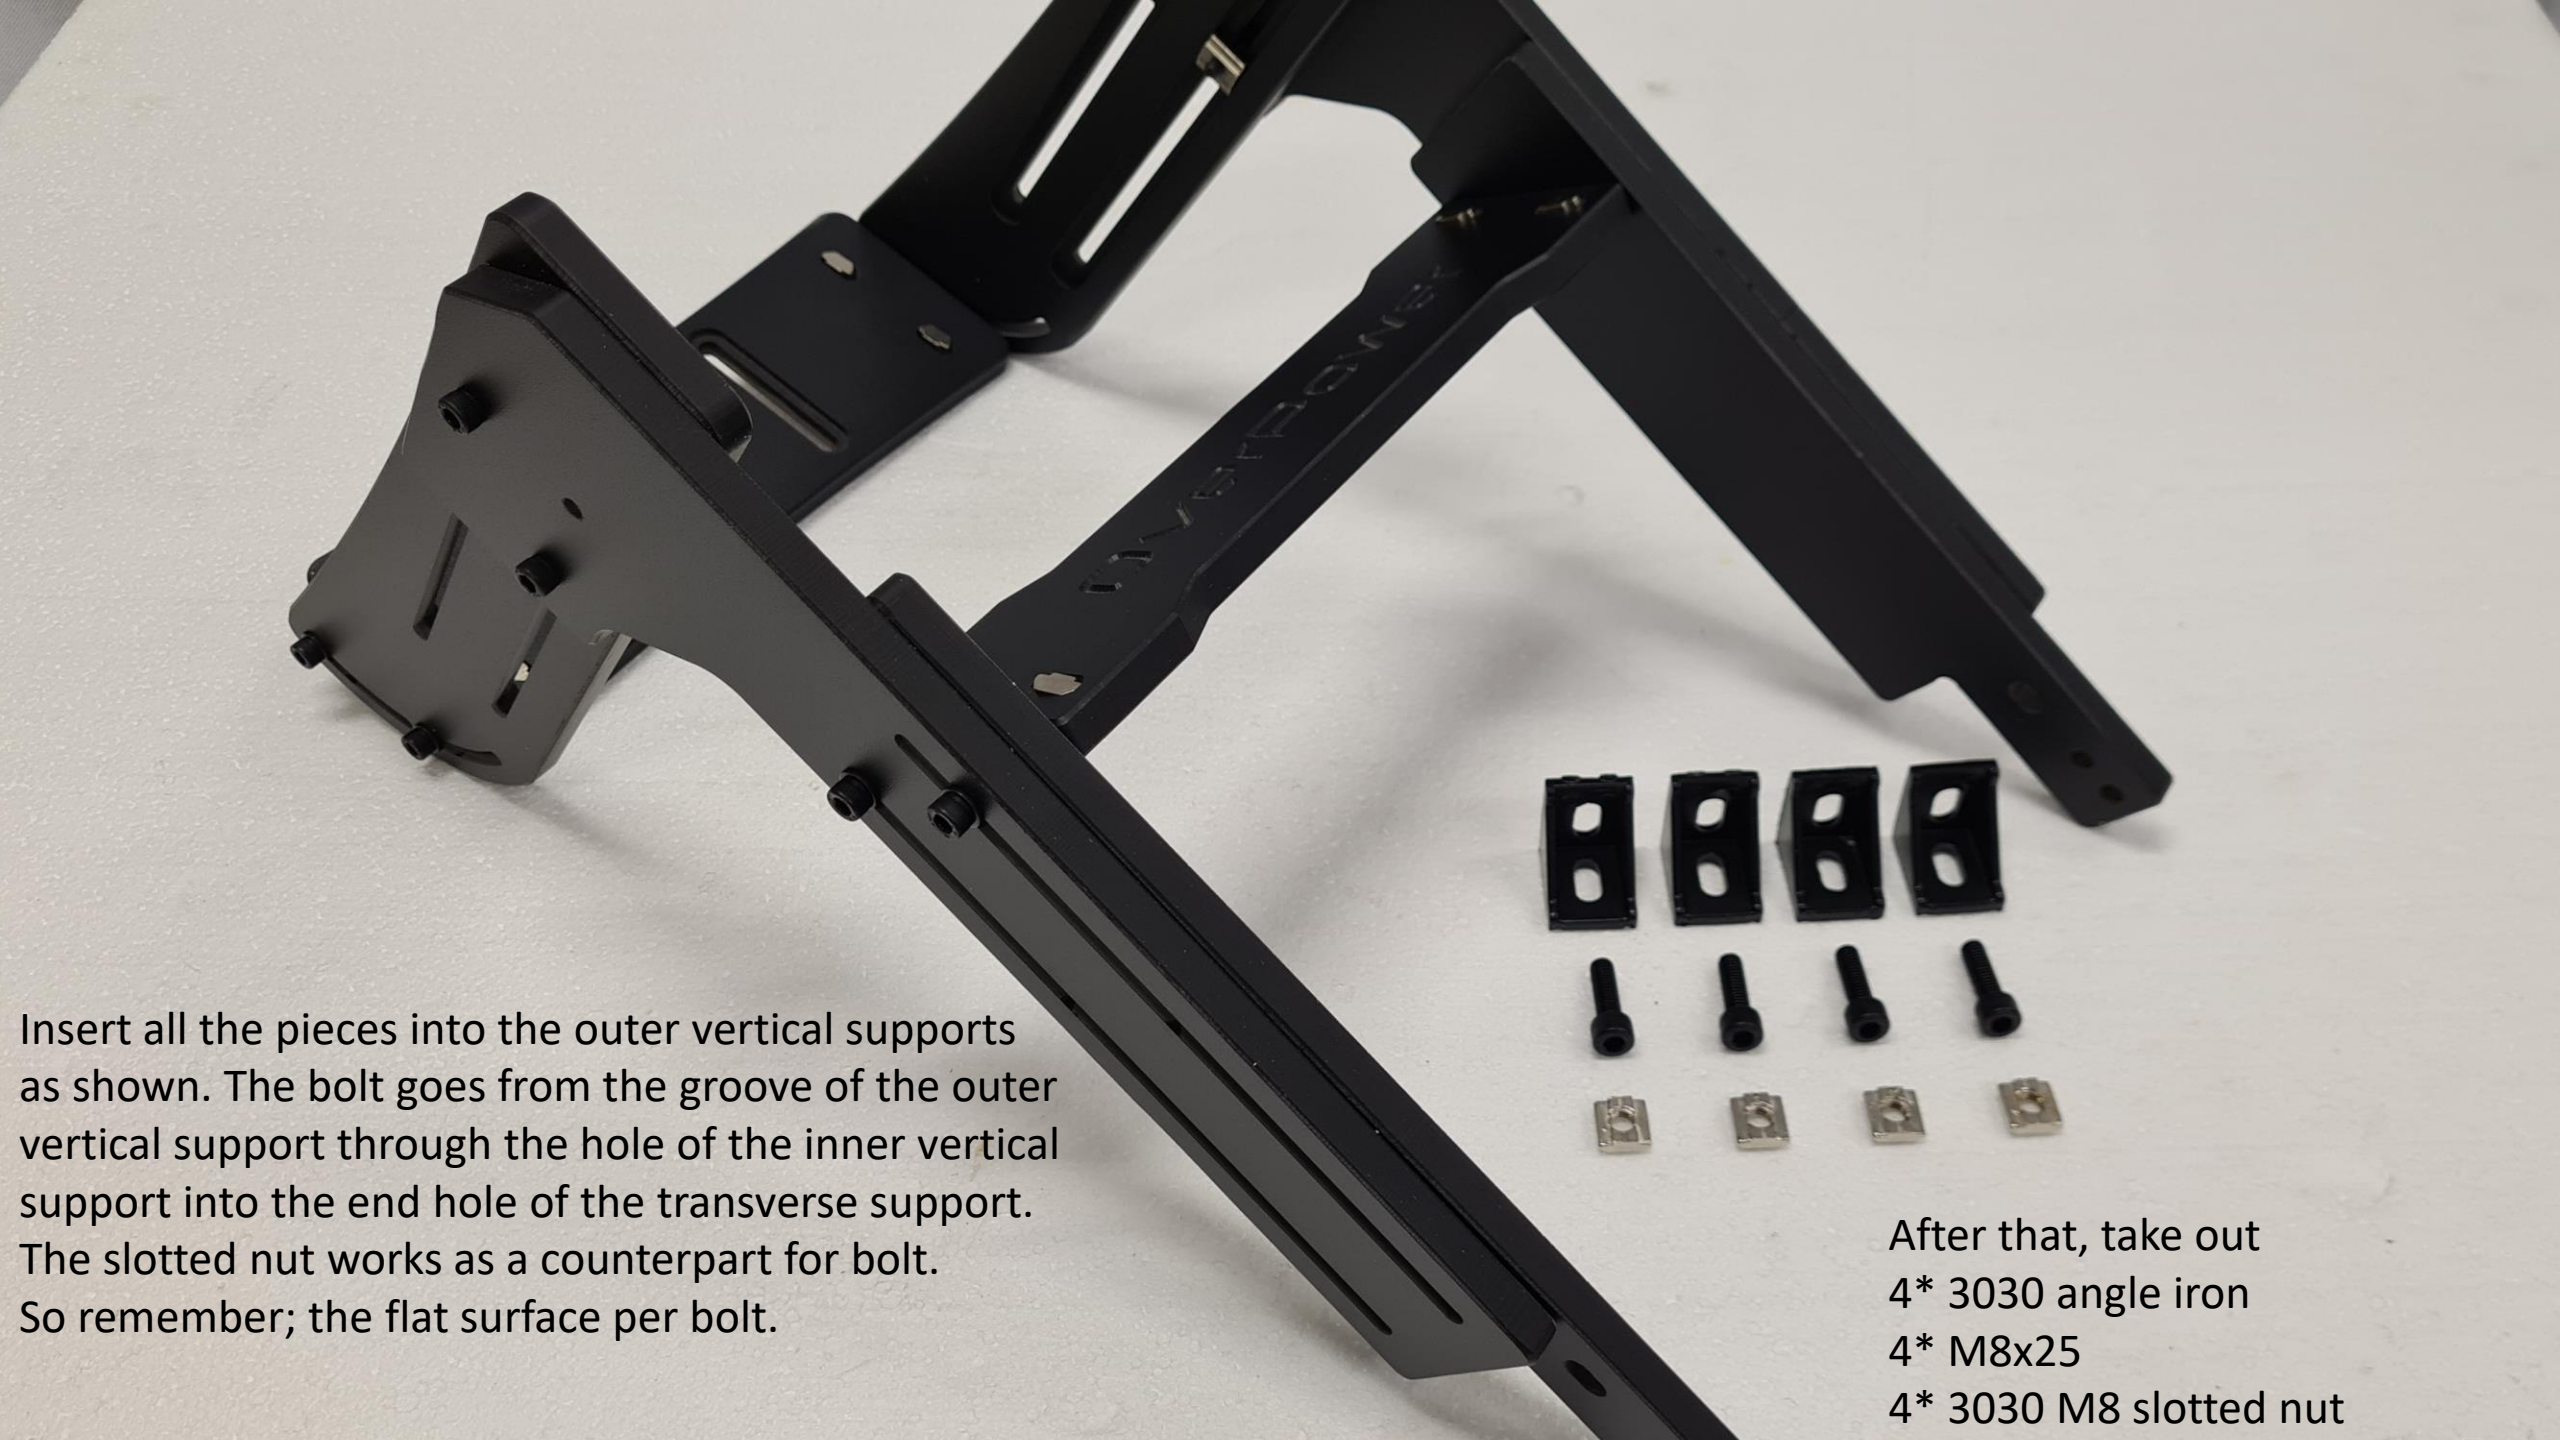

Insert all the pieces into the outer vertical supports as shown. The bolt goes from the groove of the outer vertical support through the hole of the inner vertical support into the end hole of the transverse support. The slotted nut works as a counterpart for bolt. So remember; the flat surface per bolt.

After that, take out
4* 3030 angle iron
4* M8x25
4* 3030 M8 slotted nut

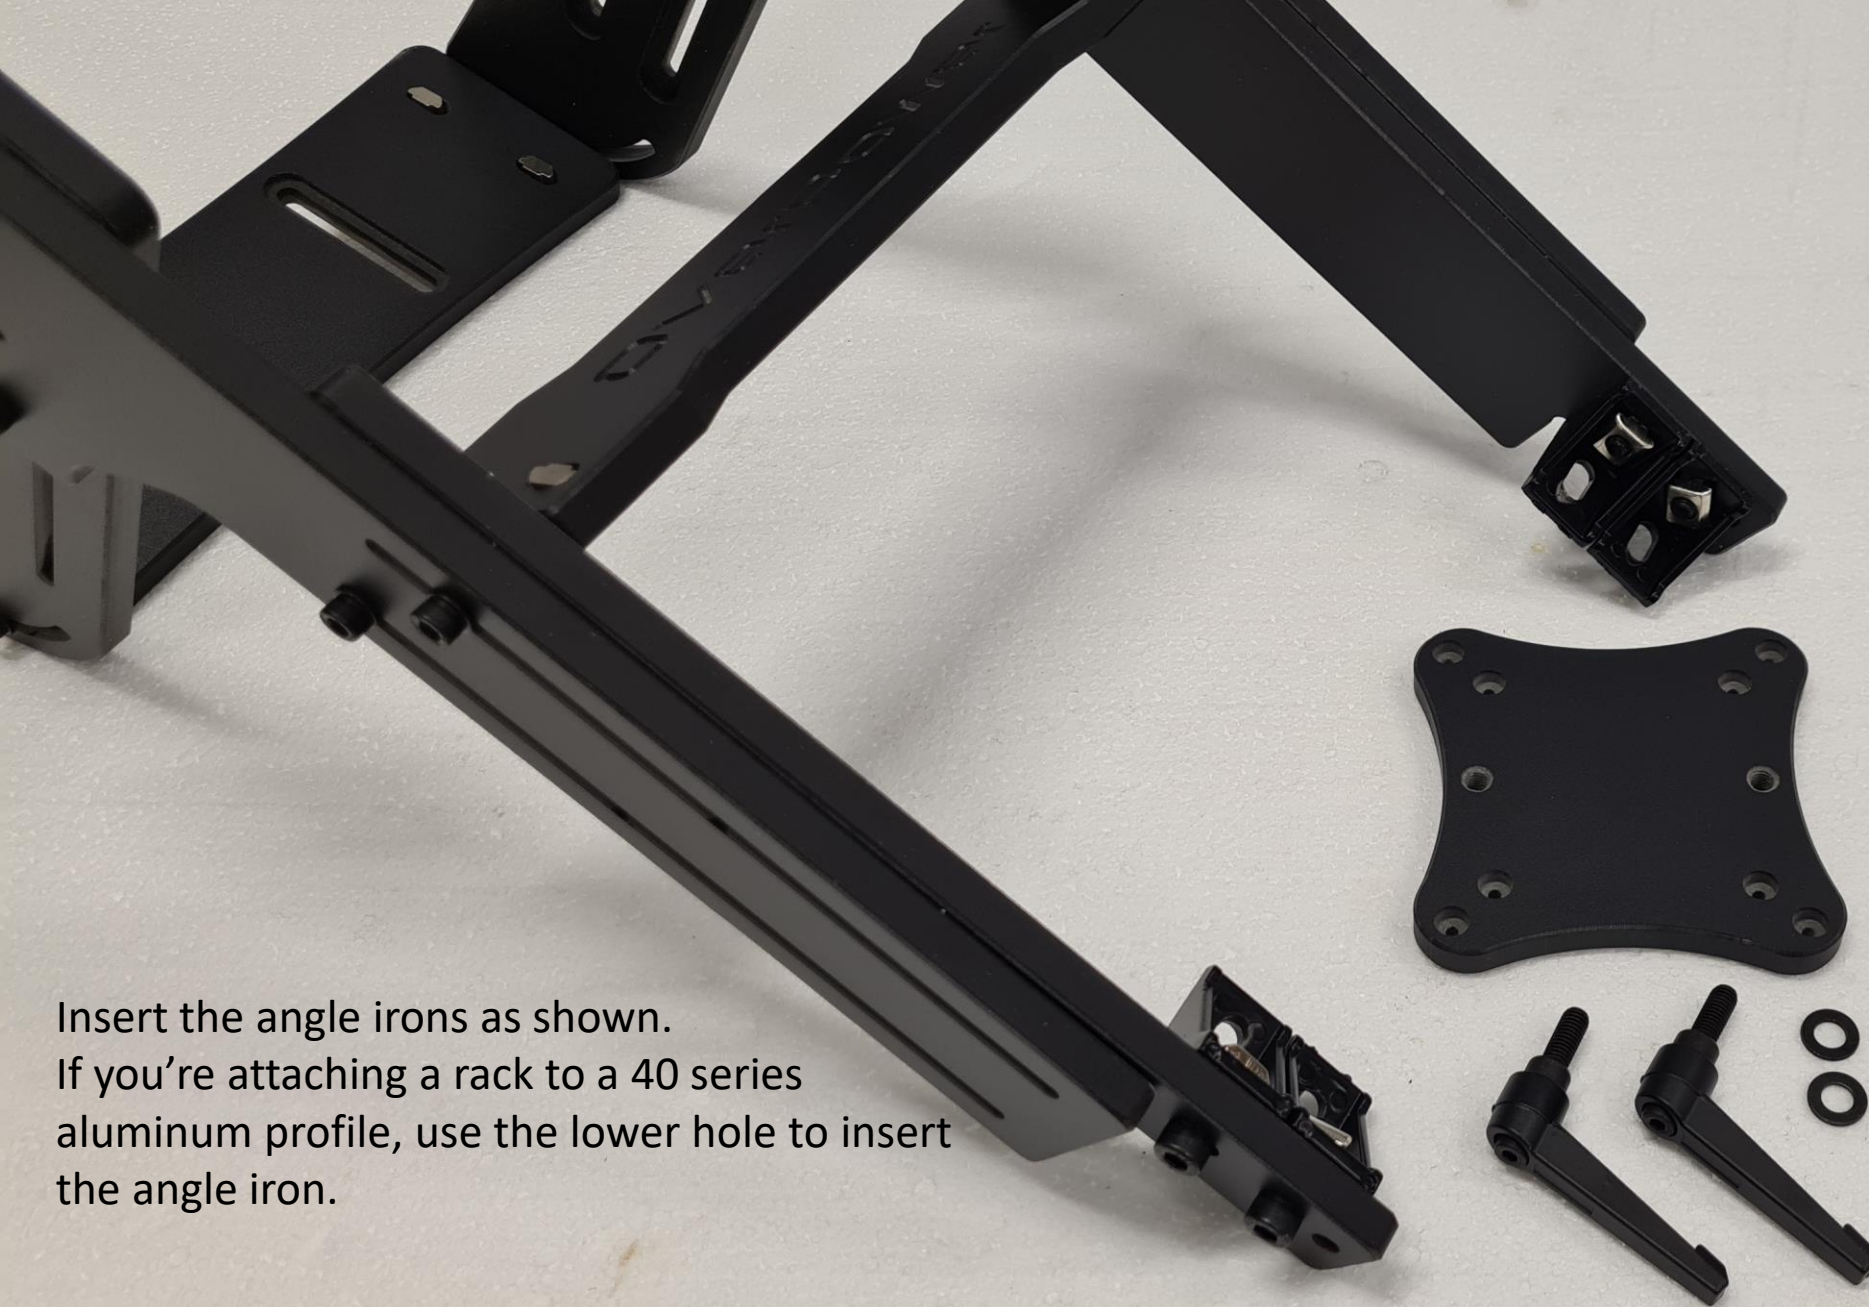

Insert the angle irons as shown.
If you're attaching a rack to a 40 series
aluminum profile, use the lower hole to insert
the angle iron.

After that, take out
1* Vesa-adapter
2* M8x20 handle
2* M8 washer

Vesa-adapter is attached as shown.
For the installation of the monitor, it might be easier to install the Vesa-adapter on the monitor first.

In addition, there also comes
4* M4x18 bolts
to install the monitor
4* M8x12 bolts
4* M8 slide-in slotted nuts
to install the rack

